

Variable Air Volume Control

**VAV 3000 Controller**

At Gerhman we are driven by a strong desire to continuously generate improvements. We do that by developing products and systems that are easy to use and energy efficient, together with industry-leading knowledge, support, logistics and efficient availability.



[gerhman.com](https://gerhman.com)

## Application

VAV compact controllers are primarily used for controlling a variable or constant air volume flow.

Application fields:

- Supply air control
- Extract air control
- Supply/extract cascade control with
  - Ratio control 1:1
  - Ratio control (positive/negative pressure)
  - Differential control (positive/negative pressure)
- Air dampers with a nominal torque of up to 5 or 10 Nm

VAV compact controllers are not suitable for environments where the air is saturated with sticky or fatty particles or contain aggressive substances.

## Type summary

<i>Type</i>	<i>Torque</i>	<i>Application range</i>	<i>Operating voltage</i>
<b>GDB181.1E/3</b>	5 Nm	0...300 Pa	AC 24 V
<b>GLB181.1E/3</b>	10 Nm	0...300 Pa	AC 24 V

For torques >10 Nm and/or special functions (e.g. auxiliary switch or spring return) cf. datasheet ASV181.1E/3 (N3545).

For networked types (KNX / PL-Link) cf. datasheet GxD181.1E/KN (N3547).


For information on accessories and spare parts cf. datasheet N4698.

## Equipment combinations

<i>Device</i>	<i>Type</i>	<i>Datasheet</i>
<b>Controllers</b>		
Room temperature controller	RCU5..	3045
	RCU6..	3046
	RDU5..	3065
Room thermostat	RDG4..	3182, 3192
Room controller	RX..	38xx
Universal controller	RLU2..	3101
	RMU7..	3144
<b>Tools for configuration and service</b>		
Handheld tool	AST10 *	5851
Interface converter	AST11	5852
PC software for service	ACS941**	5854

\* limited functionality for VAV compact controller Series E

**Design**

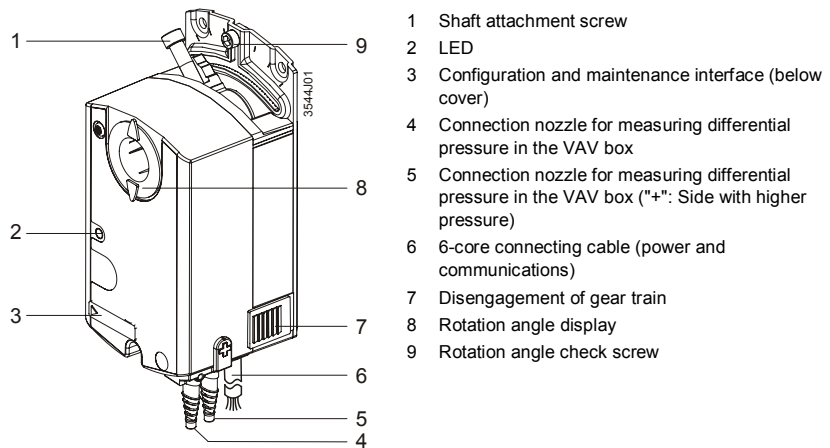

**Settings and operating mode**

The VAV compact controllers can be parameterized with configuration tools (cf. "equipment combinations")\*.

	Parameter	Setting	Description	Siemens factory setting
Settings for setpoint signal YC	YC	0...10 V	Setpoint for air volume flow	0...10 V (operating mode "con")
		2...10 V		
Settings for actual value signal U	U	FLW	Actual value of air volume flow (measurement value)	FLW
		POS	Position display of air damper	
		0...10 V		0...10 V
		2...10 V		
		0.05...5 s (Resolution 0.01 s)	Time constant actual value U	1 s
Settings for adaptive positioning (for special opening ranges)	ADP	Off	Default op. mode for position display of air damper (mapping 0°...90° → 0...100 %)	Off
		On	Adaptive op. mode for position display of air damper (mapping e.g. 0°...60° → 0...100 %)	
Setting elevation for sensor accuracy	Elevation asl	0...5000 m (Resolution 500 m)	Elevation asl to increase pressure sensor accuracy	500 m
LED state display	LED dark	No operating voltage		
	LED green	Faultless operation		
	LED flashes red	Connection tubes for sensor interchanged		
	LED red	Differential pressure sensor fault		

\* For connections at the configuration and maintenance interface please consider that voltages >10 V at YC can't be processed.


**Operating modes**

**Operating mode “con”** The following parameters have to be set or checked in operating mode “con”:

Parameter	Setting	Description	Siemens factory setting
Type	con	VAV or CAV mode	con
YC	0...10 V 2...10 V	Air volume flow reference signal (setpoint)	0...10 V
$\dot{V}_n$	1...3.16	Characteristic value for nominal air volume flow, preset by manufacturer (OEM)	1
$\dot{V}_{max}$	20...120 %	Maximum air volume flow	100 %
$\dot{V}_{min}$	-20...100 %	Minimum air volume flow	0 %
Dir	r or L	Opening direction of air damper r = Clockwise (CW) L = Counterclockwise (CCW)	r

Variable air volume (VAV) control

The VAV compact controllers operate in VAV mode provided a DC 0...10 V or DC 2...10 V Signal is fed into the input YC. The setpoint signal controls the operating range  $\dot{V}_{min} \dots \dot{V}_{max}$ .

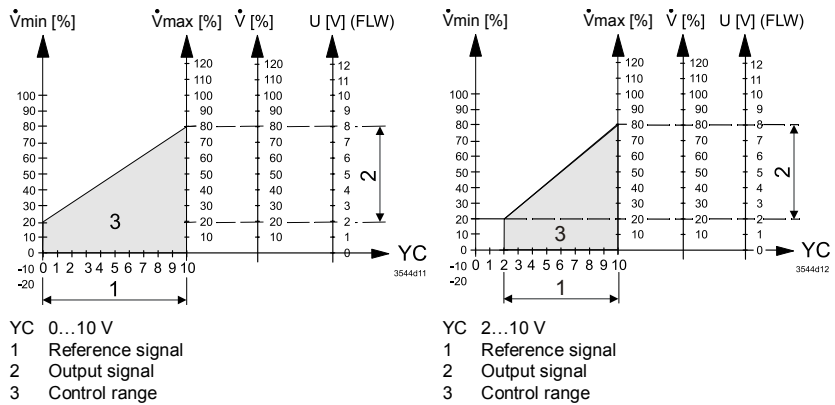

Forced control in VAV mode

Using the Y1 and Y2 control signals, the damper of the air volume controller can be driven either to the fully open or fully closed position.

VAV operating mode (Type “con”)

YC	DC 0/2...10 V			
Y1	open	G0	G0	open
Y2	open	open	G0	G0
Action	VAV control with DC 0/2...10 V setpoint compensation	Dir r → rotation CW Dir L → rotation CCW “Damper fully open“	VAV control with DC 0/2...10 V setpoint compensation	Dir r → rotation CCW Dir L → rotation CW “Damper fully closed“

Note

- Setting  $\dot{V}_{min} \leq 0$  % and YC = 0 V drives the actuator to position “fully closed”.

**Constant air volume (CAV) control**

VAV compact controllers operate in CAV mode if input YC is **open**.  $\dot{V}_{min}$  or  $\dot{V}_{max}$  control can be accomplished with control signals Y1 and Y2.

Forced control in CAV mode

If inputs Y1 and Y2 are wired appropriately, different states can be reached according to the following table:

CAV mode (Type "con")

YC	open			
Y1	open	G0	G0	open
Y2	open	open	G0	G0
Action	$\dot{V}_{min}$ control	Dir r → rotation CW Dir L → rotation CCW <b>"Damper fully open"</b>	$\dot{V}_{max}$ control	Dir r → rotation CCW Dir L → rotation CW <b>"Damper fully closed"</b>

Notes

- CAV mode is also possible when preselecting a constant setpoint via input YC.
- Setting  $\dot{V}_{min} \leq 0$  drives the actuator to position "fully closed".

**Operating mode "3P"**

To use VAV compact controllers as differential pressure sensor for air volume flow measurement with a 3-position actuator, the operating mode parameter must be set to "3P".

Parameter setting

In operating mode "3P", the following parameters must be set or checked:

Parameter	Setting	Description	Siemens factory setting
Type	3P	3P mode	con
$V_n$	1...3.16	Characteristic value for nominal air volume flow, set by manufacturer (OEM)	1
Dir	r or L	Opening direction of air damper r = Clockwise (CW) L = Counterclockwise (CCW)	r

In operating mode "3P",  $\dot{V}_{min}$  and  $\dot{V}_{max}$  are of no relevance since air volume flow control in this operating mode is ensured by the higher level room controller (typically cascade of room temperature and air volume flow). In this operating mode, air volume flow control by the VAV compact controllers is deactivated.

The air damper's opening direction is determined by the connection of signal inputs Y1 (core 6, violet) and Y2 (core 7, orange).

Differential pressure sensor with 3-position actuator (Type = "3P")

YC	N/A			
Y1	open	G0	G0	open
Y2	open	open	G0	G0
Action	Damper holds position	Dir r → rotation CW Dir L → rotation CCW <b>Damper opens</b>	Dir r → rotation CCW Dir L → rotation CW <b>Damper closes</b>	Dir r → rotation CCW Dir L → rotation CW <b>Damper closes</b>


**Operating mode “STP”** CAV step mode: CLOSE /  $\dot{V}_{min}$  /  $\dot{V}_{mid}$  /  $\dot{V}_{max}$  / OPEN

CAV step mode (Type “STP”)

YC	<1 V → $\dot{V}_{min}$			
	open → $\dot{V}_{mid}$			
	>9 V → $\dot{V}_{max}$			
Y1	open	G0	G0	open
Y2	open	open	G0	G0
Action	CAV step mode	Dir r → rotation CW Dir L → rotation CCW “Damper fully open“	CAV step mode	Dir r → rotation CCW Dir L → rotation CW “Damper fully closed“

Note

- Setting  $\dot{V}_{min} \leq 0$  drives the actuator to position “fully closed”.

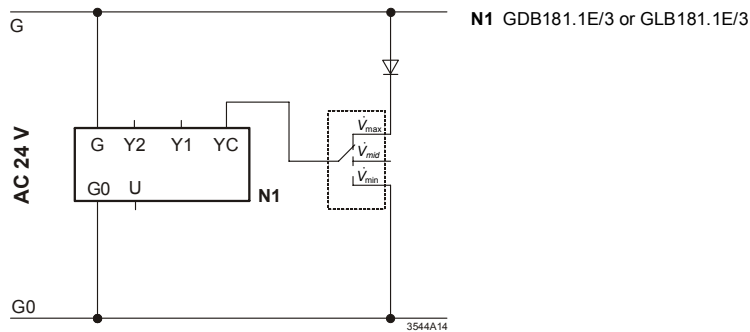

**Ordering through the VAV box manufacturer (OEM)**

As a rule, documentation provided by VAV box manufacturers (OEM) contains detailed information on VAV compact controller ordering.

The OEM generally configures and assembles VAV compact controllers as VAV box units. This facilitates commissioning at the construction site considerably. Should changes be necessary, the use of PC software for service ACS941 (download free of charge at [www.siemens.com/openair](http://www.siemens.com/openair)) and interface converter AST11 is recommended.

**OEM always sets  $\dot{V}_n$  (nominal air volume flow) as a matter of principle.**

Configuration for operating mode “3P”

For configuration for operating mode “3P”, supply and extract air volume controllers are each connected to separate 3P outputs and DC 0/2...10 V inputs of a suitable DDC room controller, e.g. RXC31.1.

Configuration for operating mode “con”

When “con” is configured, a differentiation is to be made as to how VAV compact controllers are wired in relation to the relevant controller:

In the case of **parallel control**, the controller controls all VAV compact controllers in a starlike (parallel) manner. I.e., the DC 0/2...10 V output signal is the reference variable for all VAV compact controllers. The OEM adjusts the minimum and maximum air volume flow limit values  $\dot{V}_{min}$  and  $\dot{V}_{max}$  individually on each controller.

Parallel control is in particular suitable to design large rooms with several air volume controllers.

With **master/slave control**, the DC 0/2...10 V output signal of the controller is fed into the supply air volume controller (master controller) as the reference variable. The extract air volume controller (slave controller) receives the master controller's actual value signal of the air volume flow as the reference variable (setpoint).

**Minimum and maximum limitation of air volume flow**

Operating mode "3P"

The limitation to  $\dot{V}_{min}$  or  $\dot{V}_{max}$  is made on the relevant controller. This means that the OEM does not set these limit values on the VAV compact controllers. The factory settings made by Siemens are 0 % and 100 % and will not be changed.


Operating mode "con"

Here, a differentiation is to be made between two cases, which must be considered when ordering the air volume controller with the OEM:

- The OEM sets the limit values (  $\dot{V}_{min}$  and  $\dot{V}_{max}$  ) on the VAV compact controller
- The limit values (  $\dot{V}_{min}$  and  $\dot{V}_{max}$  ) are set on the assigned room temperature controller, provided the controller used offers this facility

**Disposal**

---

	<p>The device is considered an electronics device for disposal in terms of European Directive 2012/19/EU and may not be disposed of as domestic garbage.</p> <ul style="list-style-type: none"> <li>• Dispose of the device through channels provided for this purpose.</li> <li>• Comply with all local and currently applicable laws and regulations.</li> </ul>
--	--



## Technical Data

<b>⚠ Power supply AC 24 V</b> (SELV/PELV) G (core 1, red) and G0 (core 2, black)	Operating voltage / frequency	AC 24 V ±20 % / 50/60 Hz	
	Power consumption at	Actuator holds	1 VA/0.5 W
		Actuator rotates	3 VA/2.5 W
Damper actuator	Nominal torque	5 Nm (GDB) / 10 Nm (GLB)	
	Maximum torque	<7 Nm (GDB) / <14 Nm (GLB)	
	Nominal rotation angle / maximum rotation angle	90° / 95° ±2°	
	Running time for nominal rotation angle 90°	150 s (50 Hz) / 125 s (60 Hz)	
	Direction of rotation (adjustable with e.g. <b>ACS941</b> )	Clockwise / counterclockwise	
<b>Signal inputs</b>			
Air volume flow reference or communication signal YC (core 8)	Input voltage	DC 0/2 ... 10 V	
	Max. perm input voltage	DC 35 V	
Reference signals Y1 (core 6) and Y2 (core 7)	Contact sensing		
	Contact open	DC 30 V contact voltage	
	Contact closed	DC 0 V, 8 mA contact current	
<b>Signal outputs</b>			
Air volume flow measuring signal U (core 9)	Output voltage	DC 0/2...10 V limited to DC 12 V	
	Max. output current	DC ± 1 mA	
	Time constant (actual value U)	0.05...5 s	
	Resolution 0.01 s / factory setting 1 s		
<b>Configuration and maintenance interface</b>	Series A - D	<b>6-pin</b> , grid 2.54 mm	
	Series E or later	<b>7-pin</b> , grid 2.00 mm	
<b>Connection cable</b>	Cable length	0.9 m	
	Number of cores and cross-sectional area	6 x 0.75 mm <sup>2</sup>	
	<b>⚠ Degree of protection and safety class</b>		
<b>Environmental conditions</b>	Degree of protection acc. to EN 60529 (cf. mounting instruction)	IP54	
	Safety class acc. to EN 60730	III	
	Operation / transport	IEC 721-3-3 / IEC 721-3-2	
<b>Standards and Regulations</b>	Temperature	0...50 °C / -25...70 °C	
	Humidity (non-condensing)	<95% r.h. / <95% r.h.	
	Product safety		
	Automatic electric controls for household and similar use	EN 60730-2-14 (mode of action type 1)	
	Electromagnetic compatibility (Application)	For residential, commercial and industrial environments	
	EU Conformity (CE)	GDB181.1E/3	GLB181.1E/3
		A5W00003842 <sup>1)</sup>	A5W00000176 <sup>1)</sup>
	RCM Conformity	GDB181.1E/3	GLB181.1E/3
		A5W00003843 <sup>1)</sup>	A5W00000177 <sup>1)</sup>
	Product environmental declaration <sup>2)</sup>	CM2E4634E <sup>1)</sup>	
<b>Dimensions</b>	W x H x D	71 x 158 x 61 mm	
Suitable drive shafts	<b>Type of drive shaft</b>		
	Round	8...16 mm	
	Round, with centering element	8...10 mm	
	Square	6...12.8 mm	
	Hexagonal	<15 mm	
	Min. drive shaft length	30 mm	
	Max. shaft hardness	<300 HV	
<b>Weight</b>	Without packaging	0.6 kg	
<b>Air volume controller</b>	3-position controller with hysteresis		
	$\dot{V}_{max}$ , adjustable (resolution 1 % / factory setting 100 %)	20...120 %	
	$\dot{V}_{min}$ , adjustable (resolution 1 % / factory setting 0 %)	-20...100 %	
	$\dot{V}_{mid}$ , adjustable (resolution 1 % / factory setting 50 %)	0...100 %	
	$\dot{V}_n$ , adjustable (resolution 0.01 / factory setting 1.00)	1...3.16	

	$\dot{V}_n = 1 \pm 300 \text{ Pa}$ at nominal air volume flow	
	$\dot{V}_n = 3.16 \pm 30 \text{ Pa}$ at nominal air volume flow	
<b>Differential pressure sensor</b>	Connection tubes (interior diameter)	3...8 mm
	Measuring range	0...500 Pa
	Operating range	0...300 Pa
	Precision at 23 °C, 966 mbar and optional mounting position	
	Zero point	± 0.2 Pa
	Amplitude	± 4.5 % of the measured value
	Drift	± 0.1 Pa / Year
	Max. permissible operating pressure	3000 Pa
	Max. permissible overload on one side	3000 Pa


<sup>1)</sup> The documents can be downloaded from <http://siemens.com/bt/download>

<sup>2)</sup> The product environmental declarations contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal).

**Diagrams**

The VAV compact controllers are supplied with a pre-wired connecting cable. The devices connected to it must use the same G0.

**Internal diagram**  
(applies to all types)

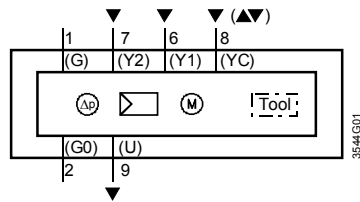

Tool = Configuration and maintenance interface  
(Series E: 7-pin)


**Connection cable**  
(color coded and labeled)

Terminal label	Color code	Terminal code	Description
1	red (RD)	G	System potential AC 24 V
2	black (BK)	G0	System neutral AC 24 V
6	violet (VT)	Y1	Positioning signal "Actuator's direction of rotation" (G0 switched) dependent on the setting of direction
7	orange (OG)	Y2	Positioning signal "Actuator's direction of rotation" (G0 switched) dependent on the setting of direction
8	grey (GY)	YC <sup>1)</sup>	Air volume flow reference signal DC 0/2...10 V (setpoint) or communication signal
9	pink (PK)	U	Air volume flow measuring signal DC 0/2 ... 10 V (actual value)

1) To ensure the functions at YC, only one cable may be connected at the time, either the cable for the air volume flow reference signal DC 0/2...10 V (setpoint) or the cable for the communication signal.


**Wiring diagram**  
**VAV**

Supply / extract air control in operating mode "con"

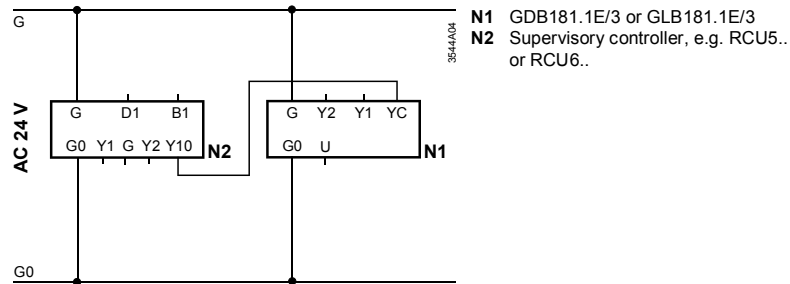


**CAV**

Supply / extract air control in operating mode "con"

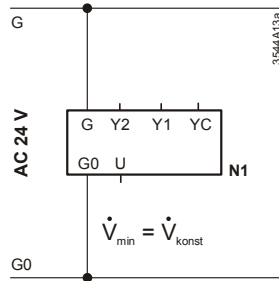


Complete shutoff in operating mode "con"

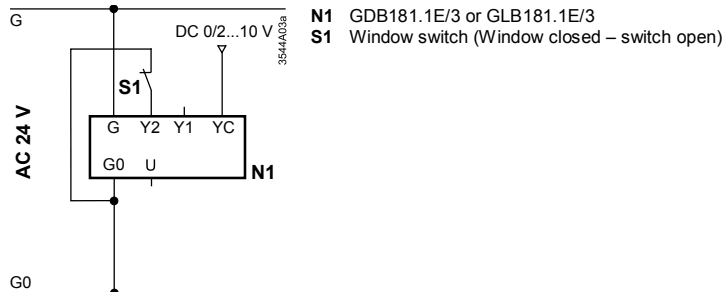

**Operating mode “3P”**

Supply / extract air control

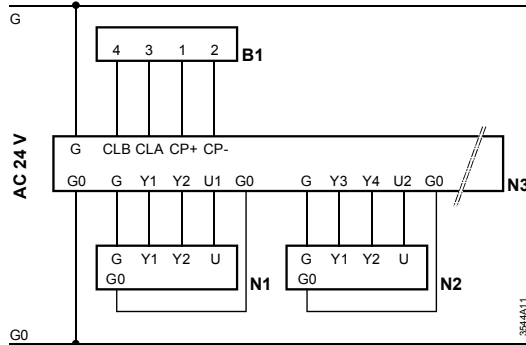


- N1** GDB181.1E/3 or GLB181.1/E3 –supply air–
- N2** GDB181.1E/3 or GLB181.1/E3 –extract air–
- N3** Room temp. controller DESIGO™ RXC31.1
- B1** DESIGO™-room unit, e.g. QAX32.1



- The operating voltage fed to terminals G and G0 must comply with the requirements for SELV or PELV
- Use safety isolating transformers with double insulation conforming to EN 61558; they must be suited for 100 % of operating time

**Dimensions**

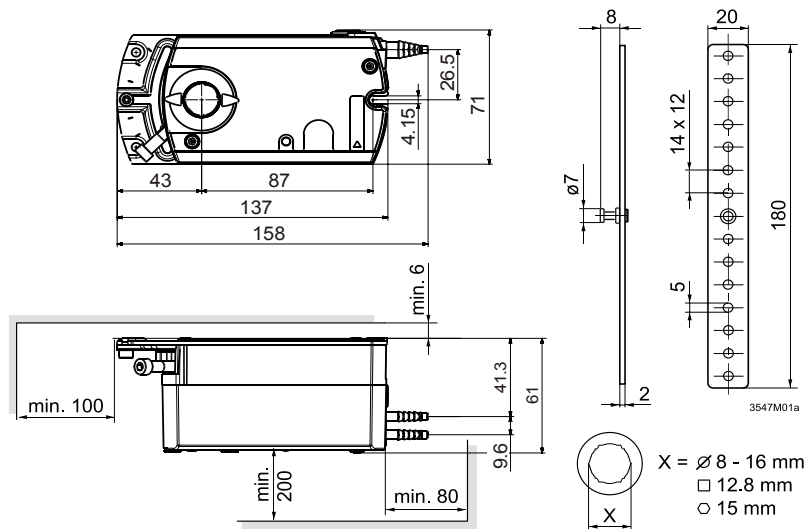

Measurements in mm



## Variable Air Volume Control **VAV 3000 Controller**



• +90 0850 303 4766



• [info@gerhman.com](mailto:info@gerhman.com)



• [gerhman.com](http://gerhman.com)